



Quick Start Guide

Model HD-70, HD-70i
High Definition Amplified Corded Telephone

It's as easy as 1,2,3



Factory Presets:

(All settings may be manually reset)

1. Ringer Tone and Ringer Volume-**HI**
2. Missed Call, Talking Keypad, Talking Caller ID-**ON** Auto-AMP **OFF**
3. Backlit: **BLUE**

To Program Telephone Number and Name (Voice Tag) Into Memory Buttons:

1. With handset on-hook, press and hold **PROGRAM/FLASH** button for 3 secs.
2. Enter telephone number using keypad (up to 31 digits)
3. Press **PROGRAM/FLASH** button again and speak a name into microphone. Recording time is about 2 seconds.
4. Press Memory button (**M1-M12**) to save.
5. To change or program a new number, repeat above steps.

To Dial From Memory:

1. Lift handset (or turn on speaker mode by pressing the **SPKR** button) to get dial tone.
2. Press desired memory button (**M1-M12**) to hear voice tag.
3. Selected memory number will dial out.

To Use Amplifier and Adjust Tone and Volume

1. Press the **AMP** button to engage amplifier. Indicator will be lit.

2. Press **VOL+** or **VOL-** to adjust and set the volume.
3. To set tone level, press **TONE** button until you hear caller's voice clearly. **TONE** will stay set.

To Find Out Whose Call You Missed*

(A lighted missed call button alerts you to a missed call)

1. Missed Call **ON/OFF** switch must be **ON**.
2. Press **MISSED** button to hear the most recent missed call.
3. Press **MISSED** Button again to hear next missed call.
4. To clear Missed Calls Log, press and hold **MISSED** button for 3 seconds.

To Access Live Q&A Support:

1. Press **Q&A** button, to connect to our Customer Service Department.

Bluetooth: To Pair With a Cell Phone:

(For Model HD-70 only)

1. Activate your cell phone. Then press and hold the **BT** button on the HD-70 until it beeps.
2. Your cell phone will search and find HD-DSP. If pin number requested enter "0000".
3. If pairing is successful, the HD-70 will announce "OK". **BT** button will be lit.

Bluetooth: To Answer a Call/End a Call

(For Model HD-70 only)

1. Telephone rings on an incoming call to cell phone.
2. Lift handset or press **SPKR** button on HD-70 to answer call.
3. Replace handset or press **SPKR** button to end call.

Bluetooth: To Make a Call

(For Model HD-70 only)

1. Lift handset or press **SPKR** button on HD-70.
2. Press **BT** button on HD-70.
3. Dial numbers from keypad or press a memory (**M1-M12**).
4. The outgoing call will dial out via the cell phone service.

* Caller ID service from your phone company is required.

Need Help? Call Toll-free Help Line:
866-376-9271 (8AM - 5PM PST, M-F)

14731 Carmenita Road, Norwalk, CA 90650
www.sereneinnovations.com △07-24-15