



Operating Guide



TV Digital Connector for

TV SoundBox®

TV-95 and TV-100 Listening Headsets

Model
DAC-202 B1


SAFETY INSTRUCTIONS:

Please read these instructions carefully before using the **DAC-202 B1** TV Digital Connector.


- This product is for indoor use only.
- Do not open the housing. There are no user serviceable parts in this product.
- Use only the AC adapter included with this product.

PACKAGE CONTENT CHECK:

Your TV Digital Connector is packaged with all of the items shown. If anything is missing, please contact our Customer Care Department immediately.

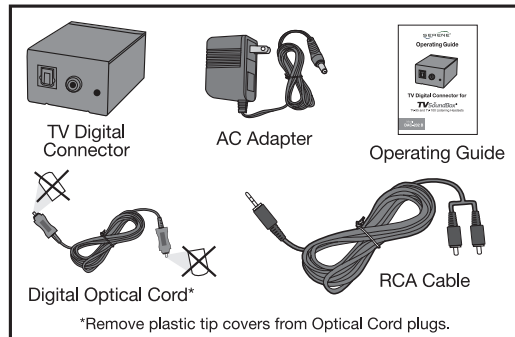

CONNECTORS:

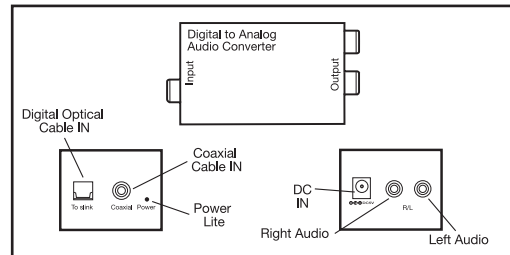

CONNECTION AND SET UP:


Please turn off all related audio and video devices before installation. Reactivate these devices only after all connections are complete.

Digital Optical Cable (TOSLINK) Connection:

1. Remove small plastic cover tips from both ends of the digital optical cable.
2. Connect one end of the optical cable to the TV optical output and connect the other end to the optical input of the DAC-202 B1
3. Connect the RCA ends of the audio cable (included with your TV SoundBox®) to the AUDIO R-L output of the DAC-202 B1. Connect the other end to your TV SoundBox
4. Connect the AC adapter to the DC "in" of the digital connector and plug in the other end to your AC wall outlet.

Please Note: Digital Optical cable is fragile. **DO NOT** bend the cable.

Typical TV SoundBox® Installation Using DAC-202 B1

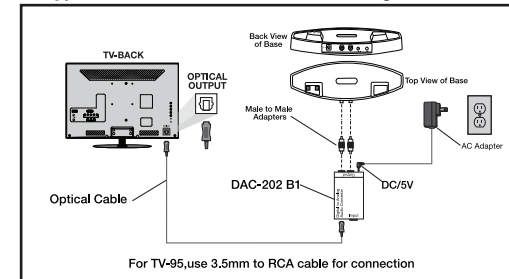

SPECIFICATIONS:

(product may vary.)

Digital Optical Cable IN.....	TOSLINK Rectangular type plug
Coaxial Cable IN.....	RCA Type Connector
LED Indication.....	Power
Audio Output.....	RCA Type RL
Audio Format Support.....	LPCM 44KHz, 96KHz
AC Adapter.....	5 VDC



Serene Innovations, Inc.
14731 Carmenita Road, Norwalk, CA90650 Toll Free: 866.376.9271
Local 562.407.5400 www.sereneinnovations.com